

GEAR GRID MODULAR BENCH ASSEMBLY INSTRUCTIONS

Items needed for assembly: 1/4 or 3/8 socket wrench, 1/2 socket, 7/16 socket, rubber mallet.

Advise: This is a (2) man assembly

Step 1. Lay a piece of cardboard down to protect your product from being scratched. (See photo) Next, grab the (4) 2" round plugs and insert them into the feet of both bench ends. (See photo)




Step 2. Next, grab both long rectangle tubes and lay them so the (6) tabs are facing the floor. (See photo) Note: when laying these tubes down you will notice one tube will have (1) weld dot and the other tube will have (2) weld dots. (See photo) You must use a (1) and (2) dot tube for assembly, or the bench will not assembly correctly.



Step 3. Take both bench ends and slide channel into long tubes. (See photo) Next, flush up ends to long tube and insert (4) 5/16-18x3/4 bolts and (4) 5/16 washers per side. (See photo) **Note: Do not tighten bolts at this time.**



Step 4. Take bench wood top and flip it over so the back is facing up. (See photo) Next, take frame and place it on top of bench top. (See photo) **Note: doing this makes lining up holes easier.** Now take (6) 1/4-20x3/4 bolts and (6) 5/16 washers and insert them through the tabs and into the wood top inserts. (See photo) **Note: for best results insert (2) bolts and washers at either end to hold top into place and then adjust frame to line up the remaining four holes**. (See photo) Once bolts are in place, you can now tighten all hardware.

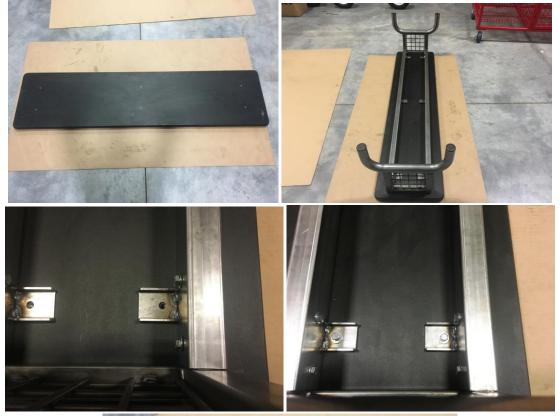



YOUR BENCH IS NOW COMPLETE

