

Hose Shelf Installation*

*Available for 24" wide lockers only


Tools Required:

- · 7/16" Socket and ratchet
- 1/2" wrench



Parts

BRACKET, L.H.
QTY - 1



BRACKET, R.H.



J-HOOK QTY - 2



T SHELF TUBE QTY - 2



1/4-20 x 4-1/2" BOLT QTY - 4



1/4" WASHER QTY - 4



WEDGE NUT QTY - 4



21 BOOK END QTY - PER ORDER



22 5/16-18 NYLOCK NUT QTY - 2




Hose Shelf Assembly

Step 1: Locate the following parts from the list:

Part	Description	Quantity
#18	1/4-20 x 4 1/2" Bolt	4
#19	1/4" Flat Washer	4
#20	Wedge Nut	4
#14	Bracket, L.H.	1
#15	Bracket, R.H.	1

Install bolt through the washer and through the outside of the side bracket. Place the wedge nut inside the U-Channel and thread the bolt in. Do this step for both sides, as shown in the photo below. Ensure the orientation of wedge nut is as shown. **Do not tighten bolts at this point.**

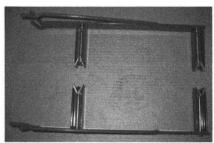



Step 2: Locate the following parts from the list:

Part	Description	Quantity
#21	Book End	1
#17	Shelf Tube	2

Slide shelf tubes over the U-Channels on one side of the bracket as shown in the photos below. Next, slide the book end over the shelf tubes with the book end angled in towards the center. Then, install the other bracket side over the other end of the shelf tubes. Push the hose shelf together and tighten the bolts. **Do not over tighten because deformation of the material will occur.**



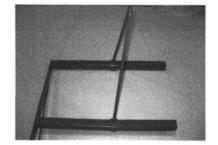

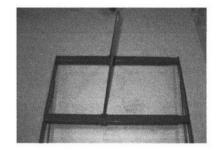

Hose Shelf Installation

Step 1: Locate the following parts from the list:

Part	Description	Quantity
#16	J-Hook	2
#22	Nylock Nut	2

Install assembled hose shelf by hooking it to the back panel on the unit. Take one J-Hook and a nylock nut and fasten shelf to side panel as shown in the photos below. Install the second J-Hook the same way on the other side of the shelf.



