





Tools Required:

7/16" Wrench

The diagram below shows the SECUREBOX™ installed to the locker side.

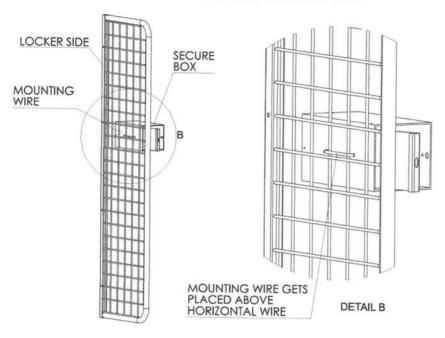

Open the SECUREBOX™ door and unthread the castle nuts from the mounting wire. Next follow the diagram below and position the mounting wire in the desired location you would like the box to be. Guide threaded ends through the holes in the box and thread the castle nuts back on and tighten with a 7/16" wrench.

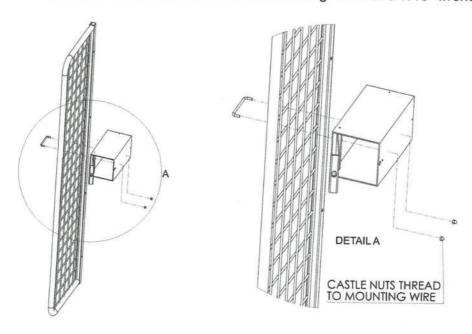





SECURE USING SUPPLIED WASHERS AND ACORN NUTS AS SHOWN.

