


## STOW-AWAY SEAT™ Installation\*

\*Cannot be used with door option

## **Tools Required:**

- 7/16" Wrench
- · 7/16" Socket and ratchet

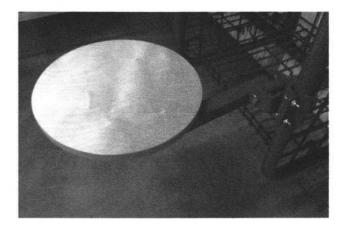

**Step 1:** Place seat at desired height with the mounting brackets between the horizontal wires. Place the other side mounting bracket over welded bolt and thread on nut as shown in the photos below.





Step 2: Install the three 1/4-20" by 1" bolts to bracket and install 1/4-20" nuts as shown in the photo below.

